

THESE INSTRUCTIONS MUST BE READ BY THE OPERATOR BEFORE STARTING THE MACHINE.



9.1 Pedestrian & Ride-On Rollers

- This equipment is designed to be operated by someone with normal ability. Persons with a disability or injury
 must assess whether their disability, when using the equipment, will affect their health and safety and the safety
 of others.
- It should only be operated by someone with experience of similar equipment.
- This equipment must not be used by anyone whose competence is impaired, for example by drink or drugs.
- 1 The roller must be operated correctly according to the manufacturer's or owner's operating instructions, which are available on request if required.
- **2 CHECK** that all persons and animals are clear of the work area.
- 3 CHECK that all guards are secure. NEVER operate the roller with missing or defective guards.
- 4 Before starting an engine the operator should familiarise himself/herself on how to stop it.
- **5 CHECK** before moving that there are no obstructions near the roller.
- **6** Before moving, sit in the operator's seat of the ride-on roller or stand in the correct position at the controls of the pedestrian roller.
- 7 When noise levels are uncomfortably high over 80dB(A), it is advisable to wear hearing protectors.
- **8** If higher noise levels occur regularly when it is necessary to shout to be heard, (85dB(A) and above) the law requires that hearing protectors must be worn.
- **9 DO NOT** operate on or across slopes greater than those specified by the manufacturer (usually about 20° 36% or 1 in 2.75).
- 10 DO NOT smoke when refuelling. **NEVER** refuel with the engine running.
- 11 Replace the fuel caps securely on the engine and fuel container. Wipe up any spillage immediately.
- **12** Fuel containers should be in good condition and leak proof.
- **13 DO NOT** operate the roller in a hazardous or explosive atmosphere.
- 14 DO NOT operate the roller in a badly ventilated area where exhaust fumes can build up.
- **15 CHECK** that there is no combustible material lying on or against the exhaust system. The exhaust pipe and silencer get very hot.
- 16 In the event of a leak of fuel or oil developing, switch the engine off **IMMEDIATELY**.
- 17 If warning lights show or gauges register outside normal limits, switch off the engine.
- **18 DO NOT** top up with coolant while the engine is running. **ALLOW** the radiator to cool before removing the radiator cap and topping up.
- **19 DO NOT** leave the engine running when the machine is left unattended.
- **20** Always ensure that the roller is parked in a safe situation.
- **21 DO NOT** attempt repairs. Contact the Hire Company.



The UK's Leading Association for Plant & Equipment Hire Professionals

CPA. 27/28 Newbury Street, Barbican, London EC1A 7HU Tel: 020 7796 3366 Fax: 020 7796 3399 Email: enquiries@cpa.uk.net www.cpa.uk.net